

POWAKADDY PRODUCT SAFETY INSTRUCTIONS

BEFORE USING YOUR POWAKADDY TROLLEY PLEASE READ THE FOLLOWING INSTRUCTIONS AND WARNINGS FOUND ON THE BATTERY AND CHARGER.

Please save these instructions. All Powakaddy Owners Manuals can be downloaded from the Powakaddy website: www.powakaddy.co.uk/manuals-and-instructions

IMPORTANT SAFETY INSTRUCTIONS

Basic precautions must always be taken when using a mains electrical appliance:

WARNING

These warnings apply to the battery & charger and where applicable the trolley, accessories and adaptors. TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

1. Only use the product as described in the User Manual and this Safety Guide.
2. Ensure the trolley is fully assembled before use.
3. This product is for outdoor use only. Do not use in a confined space. Pay particular attention when using in close proximity to other people and vehicles. Take care when using the product in wet or slippery conditions under foot.
4. This product is not a toy. Take particular care when using around or near children. Children should be supervised if using the product at all times.
5. Do not carry out any other maintenance than which is described in the user manual.
6. If the product is not working as stated in the owner's manual or by Powakaddy, has received a sharp blow, has been dropped, damaged or dropped in water, do not use and contact a Powakaddy Service Agent or Powakaddy helpline for further assistance.
7. Do not disassemble the product as incorrect reassembly may result in electric shock or fire. Contact a Powakaddy Service Agent or the Powakaddy Helpline when service or repair is required.
8. We recommend only using Powakaddy batteries with a Powakaddy trolley; other types of batteries may be incompatible, cause damage to the battery or trolley electronics.
9. Do not modify the battery to use with other products. This will invalidate your warranty and may cause fire or risk of electric shock.

ADDITIONAL SAFETY INSTRUCTIONS

1. Avoid catching limbs in the moving parts of the trolley.
2. Use the trolley at a safe and comfortable speed. The higher speed settings are intended for use uphill. Setting the trolley

off at high speed may cause the trolley to become unstable and tip backwards.

3. Take care when using the trolley on steep hills or traversing slopes to avoid the trolley tipping.
4. Take care when travelling downhill; keep a firm grip of the handle and move at a controlled speed.
5. If using the ADF (automatic distance function), ensure there are no persons, vehicles or hazards in the path of the trolley. Only use on level ground; the trolley will continue to roll forwards if sent on a downward descent. Ensure there are no obstacles within the distance set such as ditches and water hazards.
6. The EBS (Electronic braking system) is a downhill assist, not a parking brake. When using the trolley downhill keep a firm grip of the handle and move at a controlled speed.
7. Always park the trolley on level ground when unattended.
8. Ensure the golf bag is secured adequately to the trolley before setting off and no items can fall out or get snagged in the wheels of the trolley.
9. Avoid trying to access the bag when the trolley is in motion.
10. Avoid leaving the trolley powered on when leaving unattended to avoid accidental activation by other persons.
11. Avoid contact with the trolley controls with clubs and clothing; accidental starting of motor is possible.
12. Ensure all accessories attached to the trolley are securely fastened according to fitting instructions. Do not sit on the Seat when trolley is in motion or deliberately ride on the Anti-tip wheel during normal use.
13. Although designed for the outdoors and most weather conditions; the trolley will not respond well to continuous abuse such as high-speed impacts with golf clubs, golf balls, trees or the occasional visit to a bunker or a lake. NEVER USE A TROLLEY THAT HAS ENTERED A RIVER OR LAKE. DO NOT USE OR CHARGE A BATTERY THAT HAS BEEN IMMersed IN WATER. Please contact your local Powakaddy service agent or Powakaddy support for further information.
14. If you are concerned about the operation of your trolley, please contact your local Powakaddy Service agent or Powakaddy support.

BATTERY SAFETY



DANGER! RISK OF ELECTRIC SHOCK!

1. Never short circuit a battery. Keep it away from paper clips, coins, keys and other small metal objects that can make a connection between the terminals.
2. Do not splash or immerse in liquids.
3. Do not store or charge the battery in locations where the temperatures may exceed below -10° (14° F) or above 40° C (105° F) such as outdoor sheds or metal buildings in summer.
4. Only charge your Powakaddy battery using the approved charger supplied. Using another charger may damage the battery or cause fire.
5. Never use the battery if the casing or terminals are damaged.
6. There are no serviceable parts within the battery, DO NOT ATTEMPT TO OPEN THE BATTERY or attempt a repair. RISK OF ELECTRIC SHOCK OR FIRE.
7. The battery is a sealed unit. In the unlikely event liquid leaks from the battery, do not touch the liquid as it may cause irritation or burns.

Follow the following precautions:

- Skin contact – Wash with soap and water.
- Inhalation – Expose to fresh air and seek medical advice.
- Eye contact – Immediately wash with water for at least 15 minutes. Seek medical attention.

- Disposal – wear gloves to handle the battery and dispose of immediately; contact your local council or recycling centre.



FIRE HAZARD

8. Do not incinerate the battery even if damaged; please dispose of the battery as stated in the back of this instruction manual.
9. Only use a Powakaddy Battery with a compatible Powakaddy Trolley. Use of the battery pack on other products may create risk of injury or fire.

BATTERY TRANSPORTATION

Ensure the battery isolation switch is off when transporting the trolley to avoid activating the trolley and discharging the battery.

Check with your airline before attempting to ship your battery by air.

BATTERY STORAGE

Batteries are to be stored in a cool and dry place away from direct sunlight and excessive heat or cold; ideally store at room temperature.

Charge your battery fully before storing. Charge once every three months thereafter.

CHARGING SAFETY



DANGER! RISK OF ELECTRIC SHOCK!
110 - 230 VOLTS. Class 2 Charger. Do not probe terminals with conductive objects.

1. Only charge a Powakaddy battery using the supplied Powakaddy charger. The charger and battery pack are specifically designed to work together.
2. Only charge on a hard, flat surface.
3. The charger will get warm, do not cover the charger.
4. Do not expose the charger to rain or snow.
5. Do not use a charger if the plug, leads, contacts or casing is damaged.
6. Remove the plug with care, do not pull on the cord.
7. Avoid using an extension cable.

CHARGING INSTRUCTIONS - LITHIUM

1. Before charging, activate your battery (lithium only) using the isolation switch.
2. Plug the charger into the mains outlet before attaching the battery.
3. Once the battery is fully charged the LED status light will be a continuous green light. At this point, remove the battery from the charger and the charger from the outlet.
4. Deactivate battery using isolation switch.
5. The charging process will take approximately 8 hours depending on the extent of the discharge and battery capacity.
6. Avoid leaving your battery on charge for longer than 12 hours.
7. If the charger does present a green light after this period and the battery repeatedly fails before you finish your round of golf; it may indicate the battery is nearing the end of its useful life. Please visit: <http://www.powakaddy.co.uk/faqs-and-technical/> for more information

CHARGING INSTRUCTIONS - LEAD ACID

1. Plug the charger into the mains outlet before attaching the battery.
2. Once the battery is fully charged the LED status light will be a continuous green light. At this point, remove the battery from the charger and the charger from the outlet.
3. The charging process will take approximately 8 hours depending on the extent of the discharge and battery capacity.
4. Avoid leaving your battery on charge for longer than 12 hours.
If the charger does present a green light after this period and the battery repeatedly fails before you finish your round of golf; it may indicate the battery is nearing the end of its useful life.
Please visit: <http://www.powakaddy.co.uk/faqs-and-technical/> for more information

DISPOSAL OF YOUR POWAKADDY TROLLEY



Do not dispose with household waste. Please separate or take to your local recycling centre.

DISPOSAL OF YOUR RECHARGEABLE BATTERY PACK

At the end of its useful life, please discard the battery with due care for the environment.

1. If possible, run down the battery completely and remove from the trolley.
2. Take the battery to your local recycling centre.



DO NOT DISPOSE OF WITH HOUSEHOLD WASTE.



RECYCLE

Find your local service agent at:
<https://www.powakaddy.co.uk/service-agents/>

Contact Powakaddy Support using the form provided:
<https://www.powakaddy.co.uk/contact-us/>

Alternatively call:
Monday to Friday 08:30 to 17:00
01795 473555