



OWNERS MANUAL



All PowaKaddy electric trolleys
have been awarded the Quiet Mark
by the Noise Abatement Society

Thank you for choosing the limited edition **PowaKaddy C2**. Please read these instructions carefully. Battery care is very important, please refer to section 6 on the back of this manual for battery care instructions.

When you receive your new PowaKaddy you will have the following:

1 x Trolley | 1 x Lithium Battery | 1 x Charger | 2 x Wheels | 1 x Instruction pack



IMPORTANT- you must fully charge your battery before use. Always recharge your battery within 24 hrs of use. Failure to do so could reduce the life of your battery. See Section 6 Battery Care.

Note: Your Lithium or Lithium Extended battery is stored in the frame for transportation. Remove the battery and activate using the isolation button located on the underside of the battery. The green LED must be illuminated when using the trolley and during charging. (See Section 2 Plug'n'Play™ for battery removal)



1 Getting Started

The rear wheels are assembled and released by pressing the black release clip and pushing onto the axle until the clutch is engaged. Note: the wheels can be locked into two positions on the axle; push onto the inner groove to engage drive. The outer groove can be used when drive is not required. To open the frame, pull the yellow release handle (1) down and unfold the front wheel so the frame is flat. Release the cam lock lever under the handle right side (2) and then press the release button (3) and lift the handle up to open the upper frame. Ensure the middle joint is open fully to the stop position on this joint before closing the same cam lock lever.



2 PLUG 'N' PLAY™

Your Compact C2 trolley features an innovative Plug'n'Play™ battery system including sprung terminals and a locking feature to maintain power connection over uneven terrain. Once your battery is charged and trolley assembled connect your battery as shown.

- Engage the rear of the battery first.
- Press the front until the battery clips into position. The trolley's power will automatically be connected.

To remove the battery depress the front latch and lift the front of the battery out.

Note: The Lithium battery can be stored within the tray for transportation. Please ensure you de-activate the battery using the isolation button located on the underside. Leaving your battery on with the Green LED illuminated could lead to your battery discharging or trolley activating during transportation.



3 Front Wheel Adjustment

 
Your C2 trolley will already be pre-set to run straight. If you find your trolley is tracking to the left or right you can re-adjust this by releasing the front wheel lever and rotating the adjustment roller. Rotate up to make your trolley track more to the LEFT and rotate down to track more to the RIGHT. Once you are happy the trolley is running straight re-apply the lever to lock in position.



4 Handle Height Adjustment

The Powakaddy C2 has a handle height adjust feature that allows you to position and lock the handle in 3 different positions depending on your height. Once adjusted the frame will close and open to the same handle position each time so you only need to adjust once. For convenience each trolley is supplied in the centre height position, which should be ideal for most users.

Should you need to adjust the handle height unscrew the fastener in the centre of the upper joint (highlighted red) and lift the height adjustment plate underneath shown below. There are 3 positions indicated on the upper joint and the corresponding feature on the height adjust plate. Move the handle and upper frame up or down to the desired position and tighten the screw again to secure at the new height.

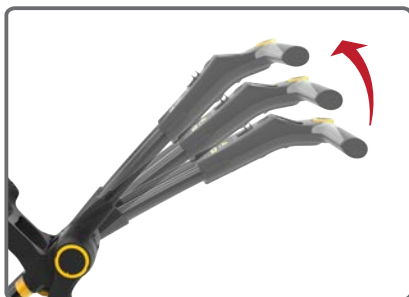

5 Controls Overview



Once your battery is connected your trolley is ready to use. The control functions for each model are detailed below.

Note: The Powakaddy Range features a power save mode as standard on all models to extend the life of your battery. If you have the trolley powered and do not use the trolley for more than 20 mins, the display will automatically power off to save energy. When you are ready to move off simply press or move the control dial on the handle to wake up the display.

Central Control Knob:

Turn to control the speed of the trolley in normal operation. Press to pause and resume at your selected speed.

Power Indicator:

Displays whether power is being applied to the drive system.



The light will illuminate red on start up to indicate the motor power condition as off. Press the on / off control in the centre to power the motor on and the green light will illuminate.

Digital Speed Setting:

Rotate the central control knob to adjust the speed of the trolley from 0 - 9 when the motor is powered on. Press central control knob to pause and resume your selected speed.

Enhanced Battery Gauge:

Displays your battery status.

Automatic Distance Function (ADF):

 
 
The ADF function is a convenient way of sending your trolley a set distance. (15, 30 or 45 yards) For example when you are approaching a green you can send the trolley towards the next tee if the route allows. Please note it is not recommended to send your trolley unattended over steep or rough terrain. To activate when the motor is paused:

- 1: Press and hold the central control knob until 'ADF' appears on the display
- 2: Rotate the control knob to select the distance between 15 to 45 Yards.
- 3: To start the function press the control knob.
- 4: To cancel rotate the Central Control Knob to "00" and select by pressing the control knob.




WARNING! Before using the ADF function please ensure the route is clear from any obstacles. To interrupt the distance function when in operation press the on/off button to stop the motor function.

**Please note ADF distance are approximate based on flat level terrain conditions using a fully charged battery. The overall distance may be affected by terrain conditions, obstacles or incline, battery power and weight of golf bag

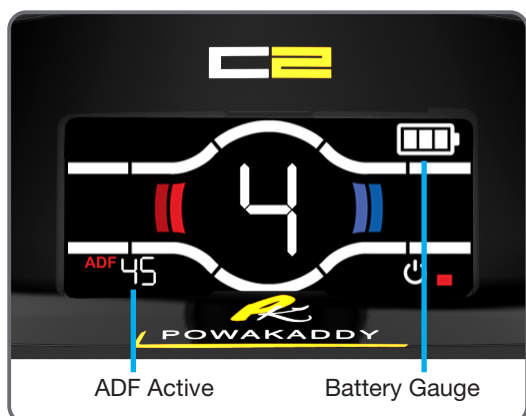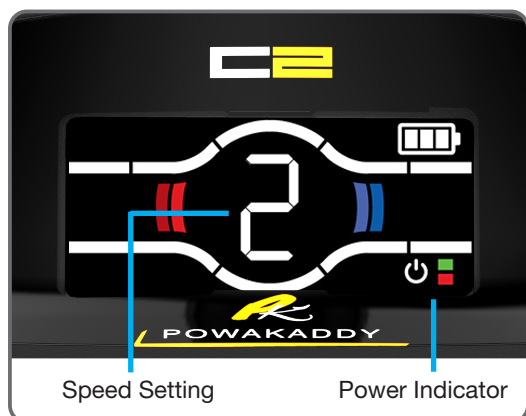

6 Battery Care

 PLUG' N'PLAY™

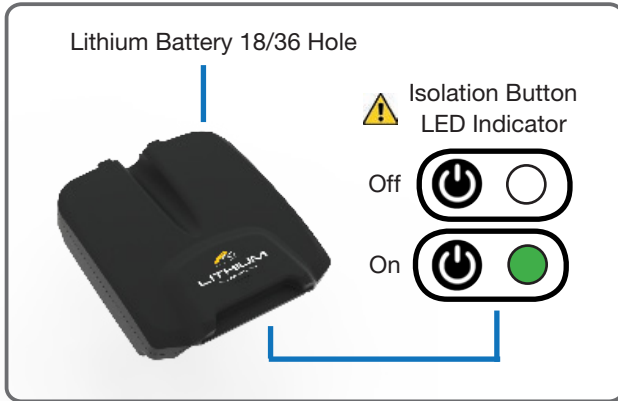

Your PowaKaddy trolley features an innovative Plug'n'Play™ battery system. To maximise your battery life please take time to read the following battery care and charging instructions.

Batteries available are as follows:

Lithium 18 Hole | Lithium Extended 36 Hole*

*In normal conditions the Extended batteries will do 36 holes when used on a PowaKaddy trolley. Conditions such as long or exceptionally hilly courses, wet ground conditions and excessively heavy golf bags may reduce the range of the battery.

⚠ Important Safety Information about Batteries & Chargers

- Never submerge the battery in water.
- Never leave the battery in the trolley when cleaning the frame.
- If you suspect your lithium battery has water inside do not use or attempt to recharge.
- Never use the charger or battery if the leads, contacts or casings are damaged.
- Dropping the battery may damage the cells or circuit components inside.
- A LITHIUM BATTERY THAT HAS BEEN SUBMERGED IN WATER OR SUSTAINED DAMAGE IS A FIRE HAZARD. **DO NOT USE THE BATTERY.** Place outdoors in a non-combustible container well away from flammable materials. DO NOT RECHARGE THE BATTERY. If you consult a Service Agent, you must explain what has happened. We recommend disposing safely at your local recycling centre.
- Avoid charging your Lithium battery in temperatures below 0 °C or exposing the battery to temperatures below -5 °C or above 40 °C.
- Always place the charger on a hard, flat heat resistant surface. Do not wrap or cover as the charger generates heat during use.
- Never expose the charger to rain, moisture or damp. If you suspect any of these have occurred then do not use the charger.
- Only charge your battery using the compatible PowaKaddy charger provided with your battery.
- Never discharge your battery other than in normal use on the trolley.
- Always check with your airline before attempting to transport batteries by air.

Charging Your Lithium Battery

- Place your battery and charger on a hard level surface and connect the battery and charger first before plugging in the mains power and switching on.
- Only charge your Plug'n'Play Lithium battery with the Green Isolation LED Illuminated.
- The charger has 2 indicator lights to represent the status of the battery during the charging process. When connecting a discharged battery, the red light will illuminate to indicate the bulk charge state. When the bulk charging process is complete, the green light will illuminate. The battery should be removed from the charger after the green light is active.
- Never leave the charger connected to the battery with the mains supply switched off.
- We recommend you recharge your battery within 24 hours of use, no matter how many holes played.
- This may take up to 7 Hours for a Lithium battery depending on the capacity of the battery and depth of discharge when charging.
- Never leave your battery in a discharged condition for prolonged periods, this will reduce the life of the battery and your charger may be unable to recharge it.
- If the battery is not to be used for long periods, our advice is to store in a cool, dry place. Please ensure the battery is fully charged before storing and charge every month thereafter.
- Ensure your Lithium battery Green Isolation LED is extinguished during transportation.
- Please refer to the product labels on your battery and charger for more information.
- At the end of the battery's life, dispose at your local recycling centre.