



OWNERS MANUAL LITHIUM

FW3




®PGA is a registered trademark
of The Professional Golfers'
Association Limited

POWAKADDY.COM

Thank you for purchasing the new PowaKaddy. We hope you enjoy your new trolley and welcome your feedback and comments. Please read these instructions carefully. Battery care is very important, please refer to Section 5 for battery care instructions on the back page.

When you receive your new PowaKaddy you will have the following.

1 x Trolley | 1 x Battery | 1 x Charger | 2 x Wheels | 1 x Instruction pack

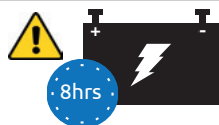

IMPORTANT- you must fully charge your battery before using your trolley. Always recharge your battery within 24 hours of use. Failure to do so could reduce the life of your battery. See section 5 Battery Care for further information.

Note: Your Lithium Plug'n'Play™ battery is stored in the frame for transportation. Remove the battery and turn on using the isolation button located on the underside of the battery. This battery must be turned on when using the trolley and during charging. (See Section 2 Plug'n'Play™ for battery removal)



1 Getting Started

Fit the wheels by pressing the yellow release button and pushing onto the axle until the clutch is engaged. The wheels can be locked into two positions on the axle; push onto the inner groove to engage drive.

To open the frame, slide the main lock (highlighted blue) forward to release the handle latch then lift the handle until both locks click into place. To fold, slide the same main lock towards the handle and fold the top portion of the frame down before releasing the upper button to fold the handle tube.



A



B



C

2 PLUG' N' PLAY™

Your FW3 trolley features an innovative Plug'n'Play™ battery system including sprung terminals and a locking feature to maintain power connection over uneven terrain. Once your battery is charged, turned on and trolley assembled; connect your battery as shown.

- Engage the rear of the battery first.
- Press the front until the battery clips into position. The trolley's power will automatically be connected.


To remove the battery depress the front latch and lift the front of the battery out.

Note: The Lithium battery can be stored within the tray for transportation. Please ensure the battery is turned off when not in use or charging. Leaving your battery turned on could lead to your battery discharging or trolley activating during transportation.



3 Front Wheel Adjustment

Your trolley will already be pre-set to run straight. If you find your trolley tracking to the left or right you can re-adjust this by releasing the front wheel lever and rotating the adjustment roller. Rotate up to make your trolley track more to the LEFT and rotate down to track more to the RIGHT. Once you are happy the trolley is running straight re-apply the lever to lock in position.

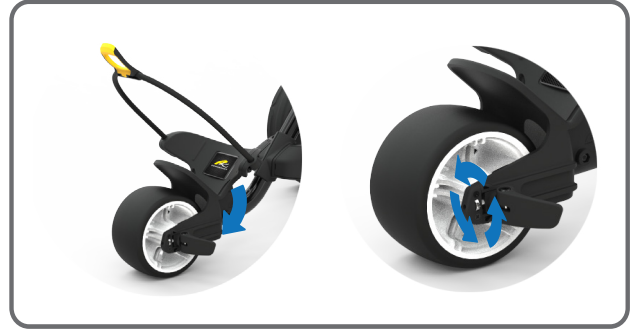

4 Controls Overview



Once your battery is connected your trolley is ready to use. The control functions are detailed below.

Power Indicator:

Displays whether power is being applied to the drive system.



The LED light will illuminate red on start up to indicate the motor power condition as off. Press the yellow control dial in the centre to power the motor on, the LED will illuminate Green. Press again to turn the motor off; the LED will change back to Red.

Control Dial:

Rotate the central control dial to adjust the speed of the trolley when the motor is powered on. Rotate the control clockwise to increase the speed and counter-clockwise to decrease the speed. Press to pause and resume your selected speed.



Maintenance

Your Powakaddy trolley is easy to maintain.

SN:

- Store your trolley inside
- Never jet wash or immerse in water. Clean the trolley using a sponge and warm water to remove mud, grass, and other debris.
- Occasionally remove the wheels and apply grease to the axles and wheels.
- Only use approved Powakaddy parts for repairs.

Should you experience a problem with your Powakaddy product please go to www.powakaddy.com/support

⚠ Isolation Button



To maximise your battery life please take time to read the following battery care and charging instructions.

Note: In normal conditions PowaKaddy Plug'n'Play™ Extended Batteries will do 36 holes when used on a PowaKaddy trolley. Conditions such as long or exceptionally hilly courses, wet ground conditions and excessively heavy golf bags may reduce the range of the battery.

⚠ Important Safety Information about Batteries & Chargers

- Never submerge the battery in water.
- Never leave the battery in the trolley when cleaning the frame.
- If you suspect your lithium battery has water inside do not use or attempt to recharge.
- Never use the charger or battery if the leads, contacts or casings are damaged.
- Dropping the battery may damage the cells or circuit components inside.
- A LITHIUM BATTERY THAT HAS BEEN SUBMERGED IN WATER OR SUSTAINED DAMAGE IS A FIRE HAZARD. **DO NOT USE THE BATTERY.** Place outdoors in a non-combustible container well away from flammable materials. **DO NOT RECHARGE THE BATTERY.** If you consult a Service Agent, you must explain what has happened. We recommend disposing safely at your local recycling centre.
- Avoid charging your Lithium battery in temperatures below 0 °C or exposing the battery to temperatures below -5 °C or above 40 °C.
- Always place the charger on a hard, flat heat resistant surface. Do not wrap or cover as the charger generates heat during use.
- Never expose the charger to rain, moisture or damp. If you suspect any of these have occurred then do not use the charger.
- Only charge your battery using the compatible PowaKaddy charger provided with your battery.
- Never discharge your battery other than in normal use on the trolley.
- Always check with your airline before attempting to transport batteries by air.

Charging Your Lithium Battery

- Place your battery and charger on a hard level surface and connect the battery and charger first before plugging in the mains power and switching on.
- Only charge your Plug'n'Play Lithium battery with the battery turned on (Green LED illuminated).
- The charger has 2 indicator lights to represent the status of the battery during the charging process. When connecting a discharged battery, the red light will illuminate to indicate the bulk charge state. When the bulk charging process is complete, the green light will illuminate. The battery should be removed from the charger after the green light is active.
- Never leave the charger connected to the battery with the mains supply switched off.
- We recommend you recharge your battery within 24 hours of use, no matter how many holes played.
- This may take up to 8 Hours for a Lithium battery depending on the capacity of the battery and depth of discharge when charging.
- Never leave your battery in a discharged condition for prolonged periods, this will reduce the life of the battery and your charger may be unable to recharge it.
- If the battery is not to be used for long periods, our advice is to store in a cool, dry place. Please ensure the battery is fully charged before storing and charge every month thereafter.
- Ensure your Lithium battery is turned off during transportation.
- Please refer to the product labels on your battery and charger for more information.
- At the end of the battery's life, dispose at your local recycling centre.