



FW

OWNER'S MANUAL



PGA ® is a registered
trade mark of the
Professional Golfers'
Association Limited.

PowaKaddy.com



Thank you for purchasing the all new PowaKaddy. Please read the following instructions carefully. Battery care is very important, please refer to Sections 2 & 6 for detailed instructions.

When you receive your new PowaKaddy you will have the following:

- 1 x Trolley
- 1 x Battery
- 1 x Charger
- 2 x Wheels
- 1 x Instruction pack

1 Product Warranty



Register now!
Don't miss out!

Scan to open the registration page
or visit: powakaddy.com/my-powakaddy

Please take a moment to register your new product.

You will be required to enter the serial numbers for the Trolley, Battery and Charger. These are located on the individual items. The serial number on the underside of the middle tube. See image for reference.

**Terms and conditions apply. See powakaddy.com for details.*



2 Plug 'n' Play Battery

IMPORTANT- you must fully charge your battery before using your trolley. Always recharge your battery within 24 hrs of use. Failure to do so could reduce the life of your battery. See Section 6 Battery Care, for detailed instructions.

Turn the battery on via the button located on the underside of the battery. The LED light will illuminate green to indicate the battery is switched on.

Your PowaKaddy trolley features an innovative Plug'n'Play™ battery system including sprung terminals and a locking feature to maintain power connection over uneven terrain. Once your battery is charged and trolley assembled, connect your battery as shown.

1. Engage the front of the battery.
2. Press the front until the battery clips into position.


To remove the battery, **depress the front latch and lift the front of the battery out.**

Note: The Lithium battery can be stored within the tray for transportation. Please ensure you turn off the battery using the power button on the underside of the battery. Leaving your battery switched on could lead to your battery discharging or trolley activating during transportation.

**BATTERY
ON**



3 Unfold the Frame

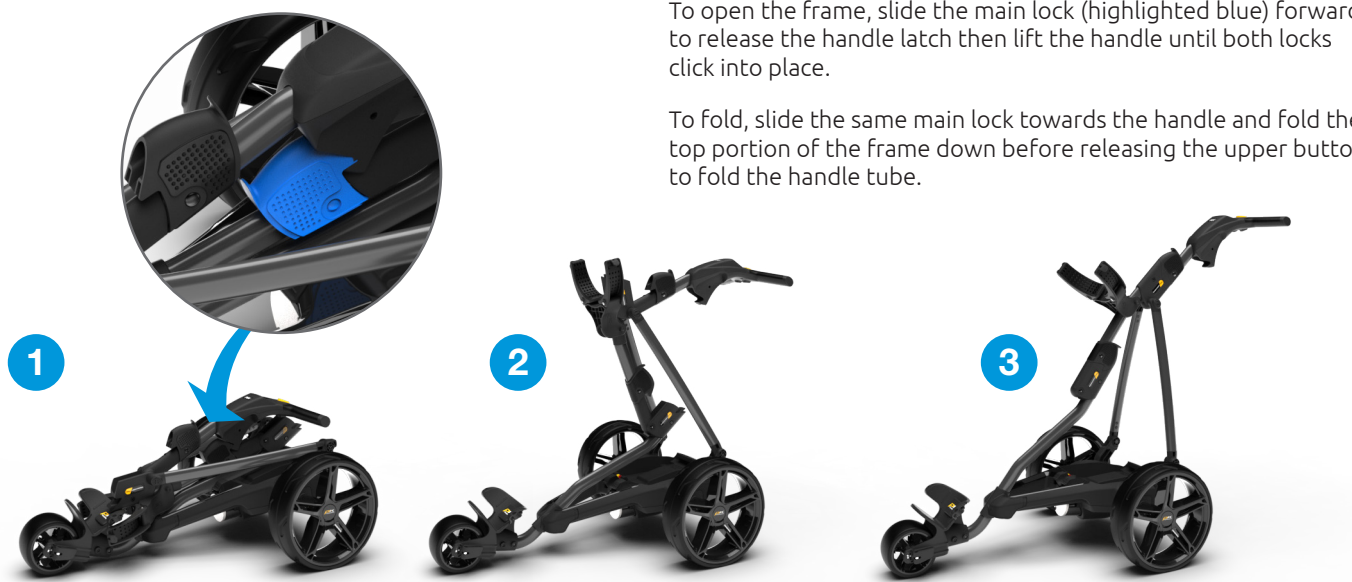

Fit the wheels by pressing the black release button and pushing onto the axle until the clutch is engaged.

To open the frame, slide the main lock (highlighted blue) forward to release the handle latch then lift the handle until both locks click into place.

To fold, slide the same main lock towards the handle and fold the top portion of the frame down before releasing the upper button to fold the handle tube.

4 Front Wheel Adjustment

Your trolley will already be pre-set to run straight. If you find your trolley tracking to the left or right you can re-adjust this by releasing the front wheel lever and rotating the adjustment roller.

Rotate up to make your trolley track more to the LEFT and rotate down to track more to the RIGHT.

Once you are happy the trolley is running straight re-apply the lever to lock in position.



5 Controls Overview



Once your battery is connected your trolley is ready to use. The control functions are detailed below.

Power Indicator:

Displays whether power is being applied to the drive system.

The LED light will illuminate red on start up to indicate the motor power condition as off. Press the yellow control dial in the centre to power the motor on, the LED will illuminate Green. Press again to turn the motor off; the LED will change back to Red.

Control Dial:

Rotate the central control dial to adjust the speed of the trolley when the motor is powered on. Rotate the control clockwise to increase the speed and counter-clockwise to decrease the speed. Press to pause and resume your selected speed.

6 Battery Care

Please note: the STANDARD Lithium Battery is designed for use over 18 holes and must always be fully charged before the next round. Please follow charging instructions as outlined on the following pages. We are aware that some golfers will try to stretch these batteries to 27 holes. This may damage the overall capacity of the battery and may result in an early failure. Playing more than 18 holes with the battery can seriously shorten the battery's life and will invalidate the battery's warranty.

Please note: In normal conditions the XL EXTENDED Lithium Battery will do 36 Holes when used on a PowaKaddy product. Conditions such as long or exceptionally hilly courses, wet ground conditions and excessively heavy golf bags may reduce the range of the trolley.

Charging Instructions

1. Plug the charger into the mains - the charger indicator light will be green.
2. Connect the charger to the battery.
3. Power the battery on via the on/off button (the LED will illuminate green). This will initiate the charging process – the charger status light will turn from green to red.
4. Once the battery is fully charged, the charger status light will be continuous green. At this point, remove the battery from the charger and the charger from the outlet.
5. Turn off the battery by pressing the power button.
6. The charging process will take approximately 8 hours depending on the extent of the discharge and battery capacity. Avoid leaving your battery on charge for longer than 12 hours.

Lithium Battery Safety

1. Never short circuit a battery. Keep it away from paper clips, coins, keys and other small metal objects that can make a connection between the terminals.
2. Do not splash or immerse in liquids.
3. Do not store or charge the battery in locations where the temperatures may exceed below -10° (14° F) or above 40° C (105° F) such as outdoor sheds or metal buildings in summer.
4. Only charge your PowaKaddy battery using the approved charger supplied. Using another charger may damage the battery or cause fire.
5. Never use the battery if the casing or terminals are damaged.
6. There are no serviceable parts within the battery, DO NOT ATTEMPT TO OPEN THE BATTERY or attempt a repair. RISK OF ELECTRIC SHOCK OR FIRE.

BATTERY ON



7. The battery is a sealed unit. In the unlikely event liquid leaks from the battery, do not touch the liquid as it may cause irritation or burns.

Follow the following precautions:

- Skin contact – Wash with soap and water.
 - Inhalation – Expose to fresh air and seek medical advice.
 - Eye contact – Immediately wash with water for at least 15 minutes. Seek medical attention.
 - Disposal – wear gloves to handle the battery and dispose of immediately; contact your local council or recycling centre.
8. Do not incinerate the battery even if damaged.
 9. Only use a PowaKaddy Battery with a compatible PowaKaddy Trolley. Use of the battery pack on other products may create risk of injury or fire.

Charging Safety

- Do not probe terminals with conductive objects.
- Only charge a PowaKaddy battery using the supplied PowaKaddy charger. The charger and battery pack are specifically designed to work together.
- Only charge on a hard, flat surface.
- The charger will get hot. Do not cover the battery or charger.
- Do not expose the charger to rain, frost, or snow.
- Do not use a charger if the plug, leads, contacts or casing is damaged.
- Remove the plug with care, to not pull on the cord.
- Avoid using an extension cable.

7 Maintenance

Your PowaKaddy trolley is easy to maintain.

- Store your trolley inside
- Never jet wash or immerse in water. Clean the trolley using a sponge and warm water to remove mud, grass, and other debris.
- Occasionally remove the wheels and apply grease to the axles and wheels.
- Use approved PowaKaddy parts for repairs.

Your serial number can be found on the underside of the central tube, please make a note for future reference. Should you experience a problem with your PowaKaddy product, please visit www.powakaddy.com/support