

SEAT FITTING INSTRUCTIONS

FW RANGE
C2 RANGE
FX & CT RANGE



## **FW** RANGE

 Orientate the FW Brackets A & B as shown below and attach using the fasteners shown right.

Note: The Support bar can be orientated for the seat to sit on the left or right depending on preference.

(A) FW UPPER BRACKET


(B) FW LOWER BRACKET


M6 X 30mm HEX BOLT

M6 NYLOC NUT

E) SUPPORT BAR

2 Slot the removable Seat Post and

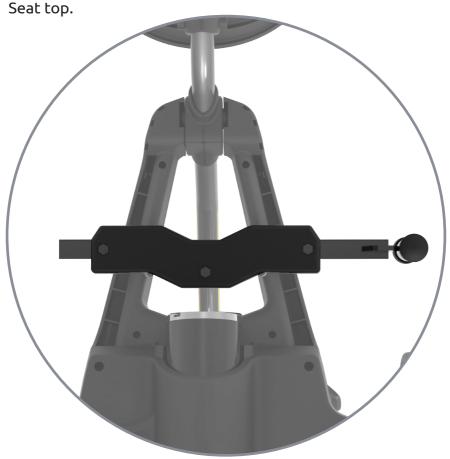

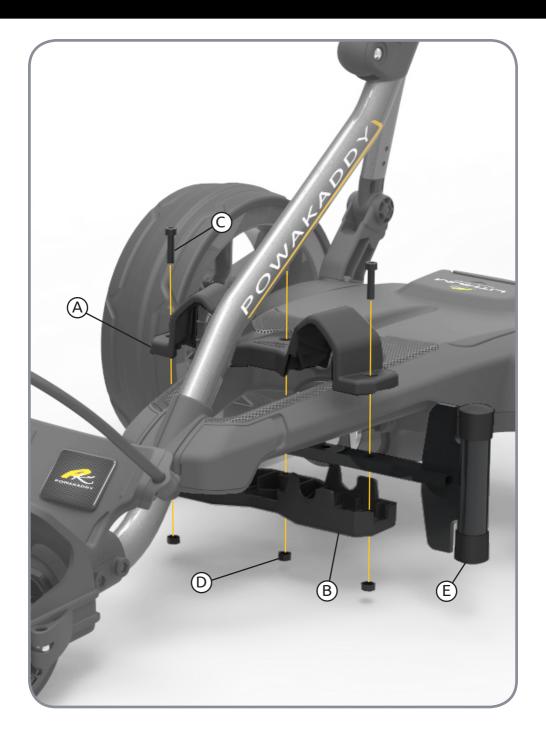

## C2 RANGE

Locate the Left and Right C2
 Brackets on the support bar as shown below.

Note: The Support bar can be orientated for the seat to sit on the left or right depending on preference.

2 Slide the M5 Nyloc nuts into the slots on the trolley as shown.

3 Secure the Support Bar and Brackets using the M5 Pozi Screws.


4 Slot the removable Seat Post and Seat top.



The bosses on each Bracket locate into the inner holes on the Support Bar.










D) M5 NYLOC NUT

(E) SUPPORT BAR

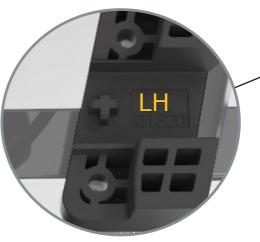

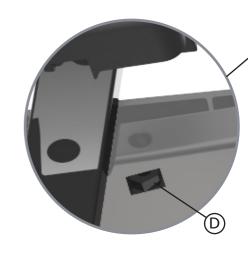

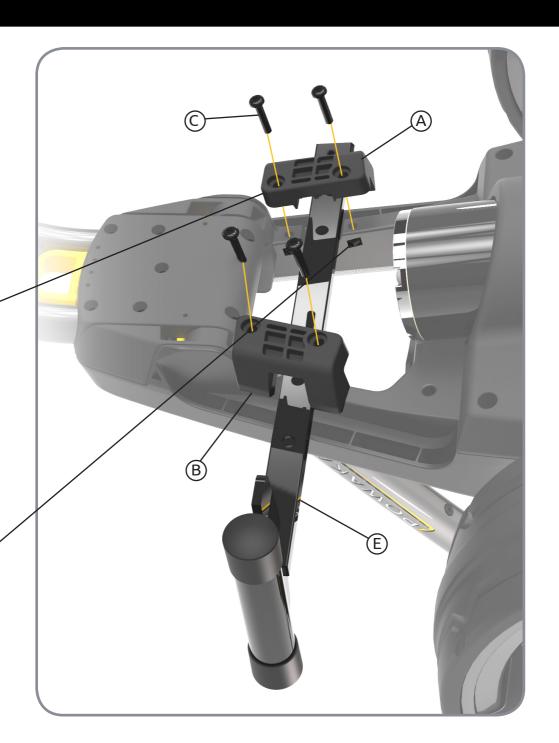


## **FX & CT** RANGE


 Locate the Left and Right FX/CT Brackets on the support bar as shown on the opposite page.

Note: The Support bar can orientated for the seat to sit on the left or right depending on preference.

- Offer up the Brackets and Suport bar to the trolley and secure with the M5 Pozi Screws and Nyloc Nuts
- 3 Slot the removable Seat Post and Seat top.

- (A) FX/CT LEFT-HAND BRACKET
- (B) FX/CT RIGHT-HAND BRACKET
- M5 X 25mm POZI SCREWS
- M5 NYLOC NUT
- (E) SUPPORT BAR

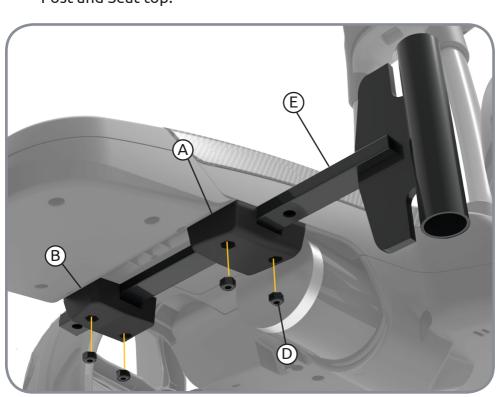

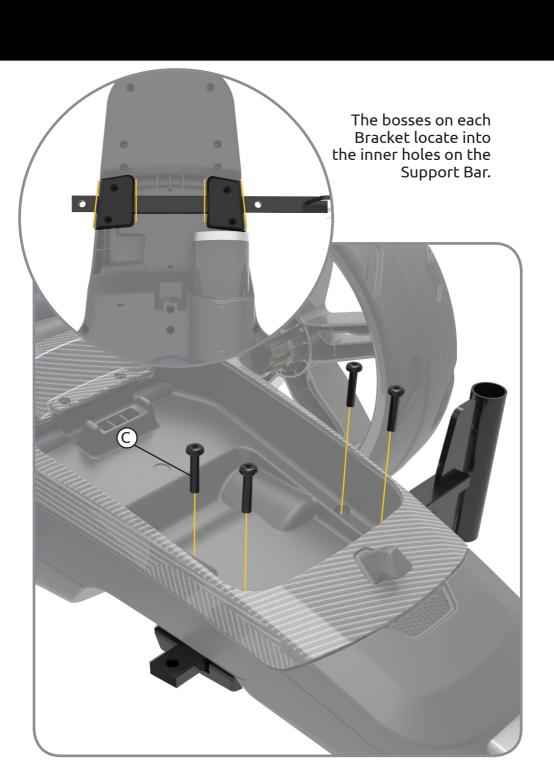

## SAND AND SEED KIT

The Sand and Seed Bucket Kit is an optional extra on the FW, C2 and FX & CT Range.

- 1 Use the M5 Pozi Screws and Nyloc Nuts to attach the Bracket to the Support Bar.
- A BUCKET HOOP
- (B) BRACKET
- 2 Slot the Sand and Seed Hoop into bracket as shown.

